

## Tek-Bar 3120B



# Quick Start Guide

## 1. Before You Begin

Before installation check the model, specifications, and installation location for the transmitter. Follow the Operating Instruction Manual for detailed installation and other information.



-  Installation of the device should be carried out by technician or qualified specialists. The technician should read and understand these Operating Instructions.
-  Do not clean or touch diaphragm seals with hard or pointed object.

## 2. Unpack


Tek-Bar 3120B Exp Absolute/Gauge Pressure Transmitter

## 3. Dimensional Drawings

Drawing and dimension with display

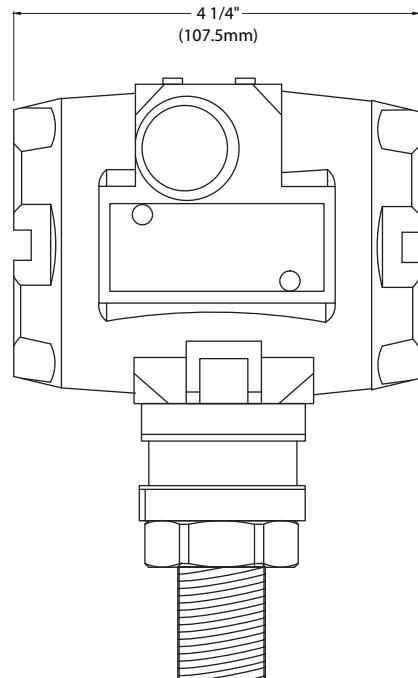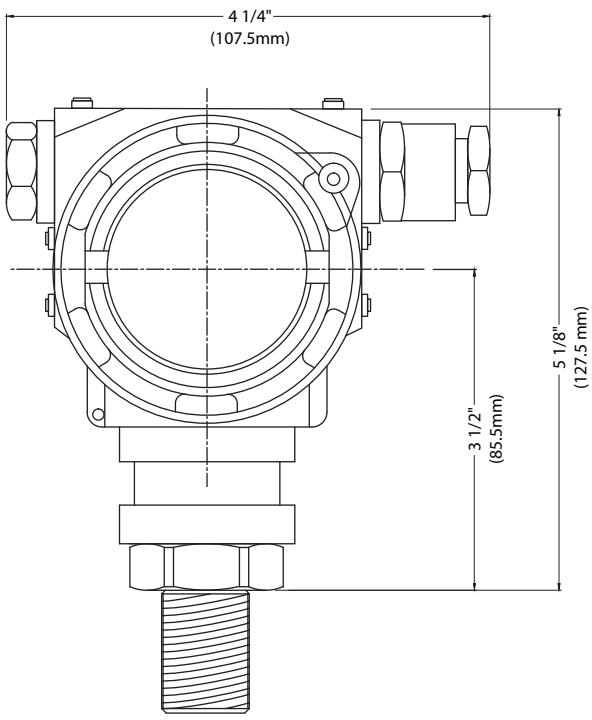

## 4. Mounting

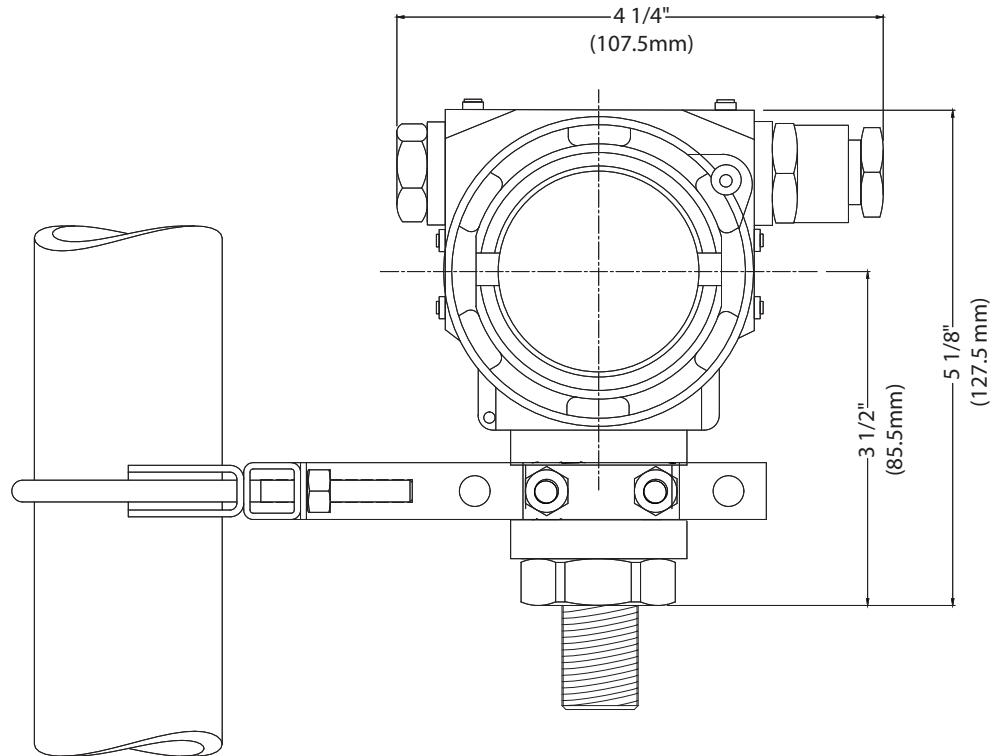

## 5. Display


The local display enables you to read all important parameters directly at the measuring point and configure the device using the function matrix. It has 5-digit LCD display.



**Tek-Bar 3120B**

# Quick Start Guide

## 6. Power Supply Wirings

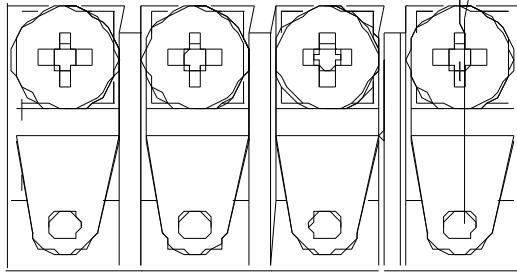


+ - A B



Label	Two Wires	Three Wires	Four Wires
+	Power +	Power +	Power +
-	Signal -	Power -	Power -
A		Signal +	Signal +
B			Signal -

- ① Power supply+ is connected with transmitter terminals+
- ② Signal+ is connected with transmitter terminals-
- ③ Signal- is connected with power supply-
- ④ 4-20mA can be wired as 2 or 3-wire; 1-5VDC is 3-wire; Modbus is 4-wire.

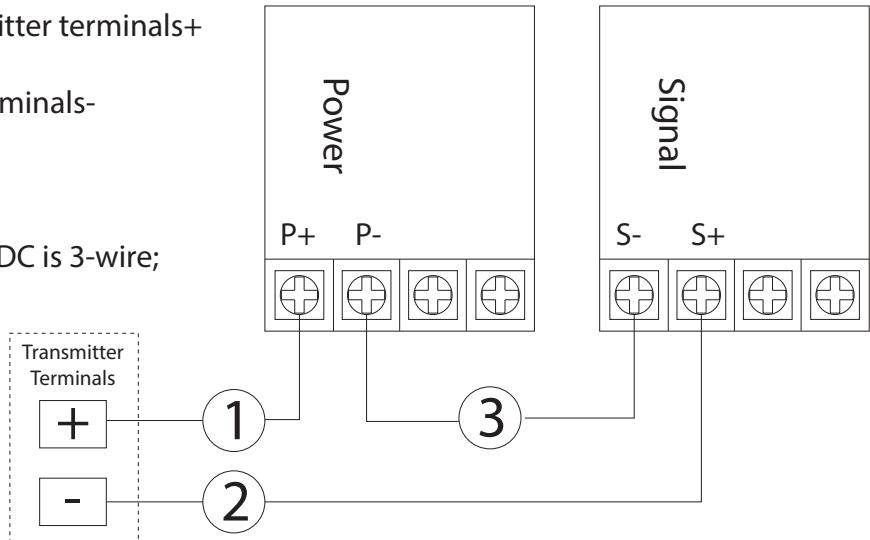

## 7. Grounding

- Shielded twisted pair signal cable is used to avoid ground loops.
- Shielded signal cable is used for single-grounding, insulated floating at the side of pressure transmitter, and grounding at the control cabinet.
- Internal ground terminals are used for direct grounding.

## >8. Configurations


The top nameplate is located in the upper part of the transmitter. Slide the name plate until the Zero/Span button is visible and fully accessible.



## >9. Installation of Transmitter

### Liquid Flow Measurement


- Place the taps to the side of the line to prevent sediment deposits on the transmitters process isolators
- Mount the transmitter beside or below the taps so gases can vent into the process line
- Mount drain/vent the valve upward to allow gases to vent

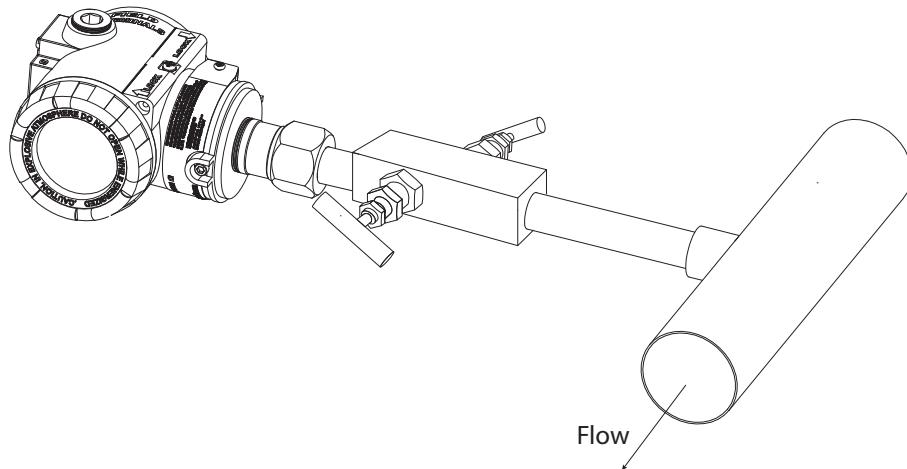

# Quick Start Guide


## Gas Flow Measurement

- Place taps in the top or side of the line
- Mount the transmitter beside or above the taps so liquid will drain into the process line

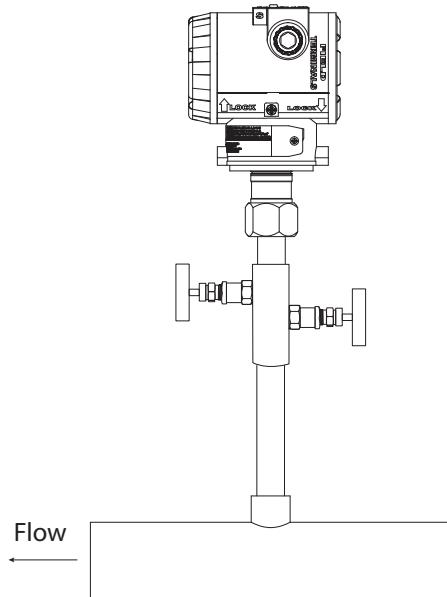

## Steam Flow Measurement

- Place taps to the side of the line
- Mount the transmitter below the taps to ensure that the impulse piping will stay filled with condensate
- In steam service above 250°F (121°C), fill impulse lines with water to prevent the steam from contacting the transmitter directly and to ensure accurate measurement at start-up

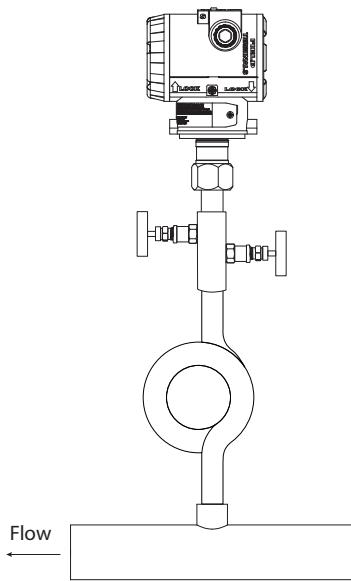


**Note:** For steam or other elevated temperature services, it is important that temperatures at the process connection do not exceed the transmitters process temperature limits.

## 10. Analog button programming menu


### Keys operation

#### Set PV=0

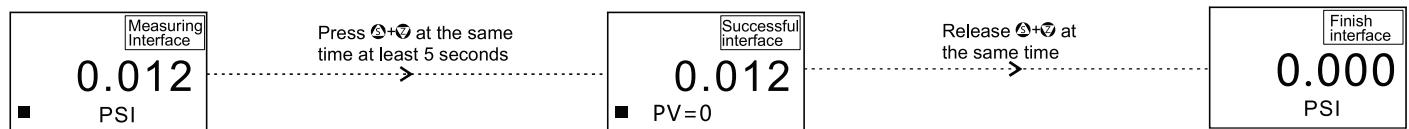


#### Factory reset


##### Method 1:

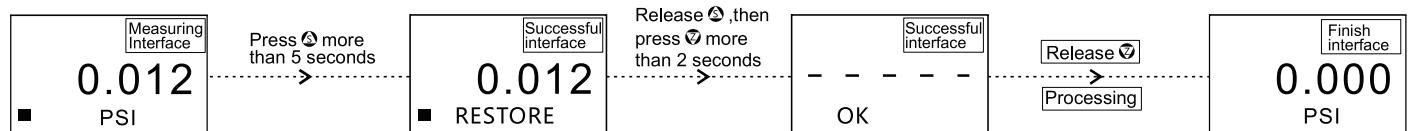


##### Method 2:

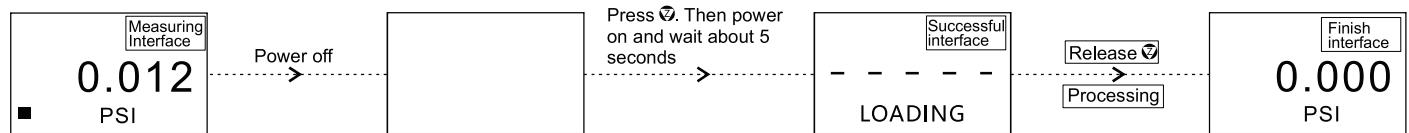

#### Sensor temperature display(SV: temperature & PV: pressure)dynamic switching, default temperature unit °F:

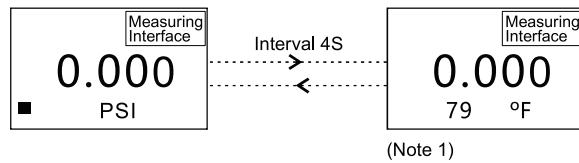

#### SV display mode:

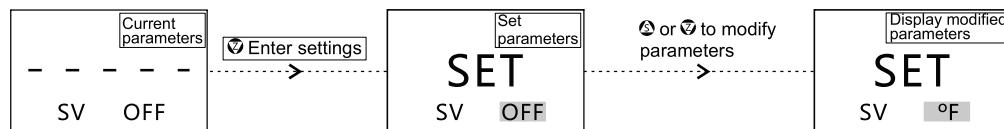







# Quick Start Guide

## Detailed operating instructions

### Measuring Interface

Measuring Interface  
-0.000 mA

▼  Confirm and enter the next menu

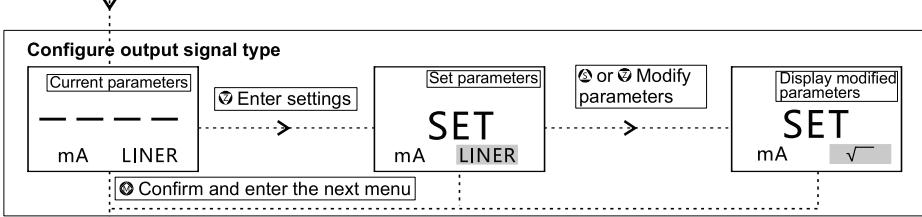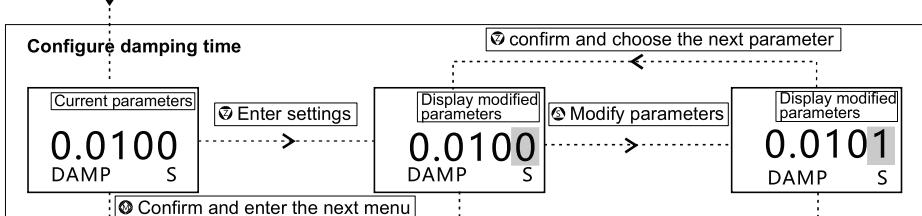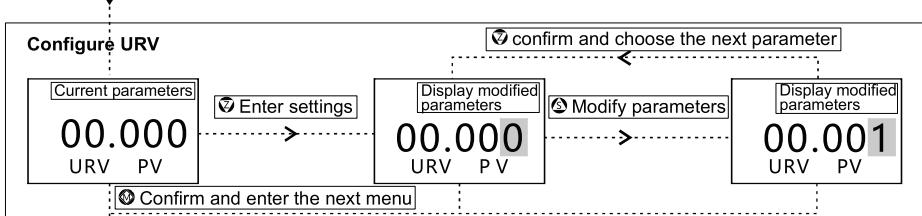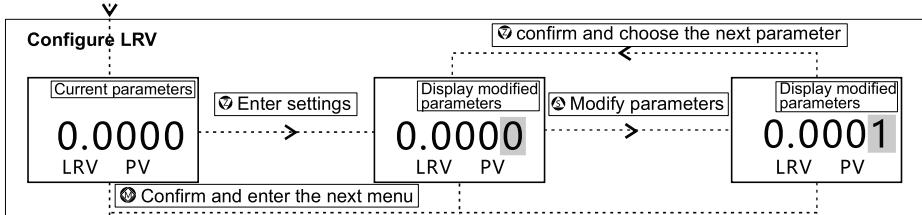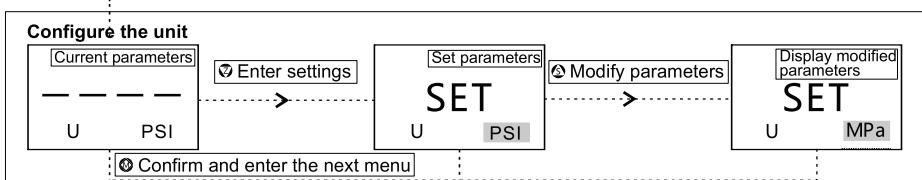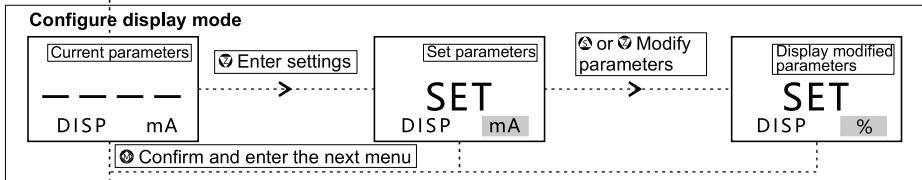

### Parameters table

#### Display mode

%	Percentage
PV	Process variable
mA	Current

#### Square root display mode

%	✓ %
PV	✓ kPa
mA	✓ mA

#### Units (↓↑, ↑↓)

kPa
MPa
bar
psi
mmHg
mmH2O
mH2O
inH2O
ftH2O
inHg
mHg
TORR
mbar
g/cm <sup>2</sup>
kg/cm <sup>2</sup>
Pa
ATM
osi
mm
m

#### Lower range value

-19999-99999

#### Upper range value


-19999-99999

#### Damping time

0-100S

#### Output signal type

✓	Square root
LINER	Linearity

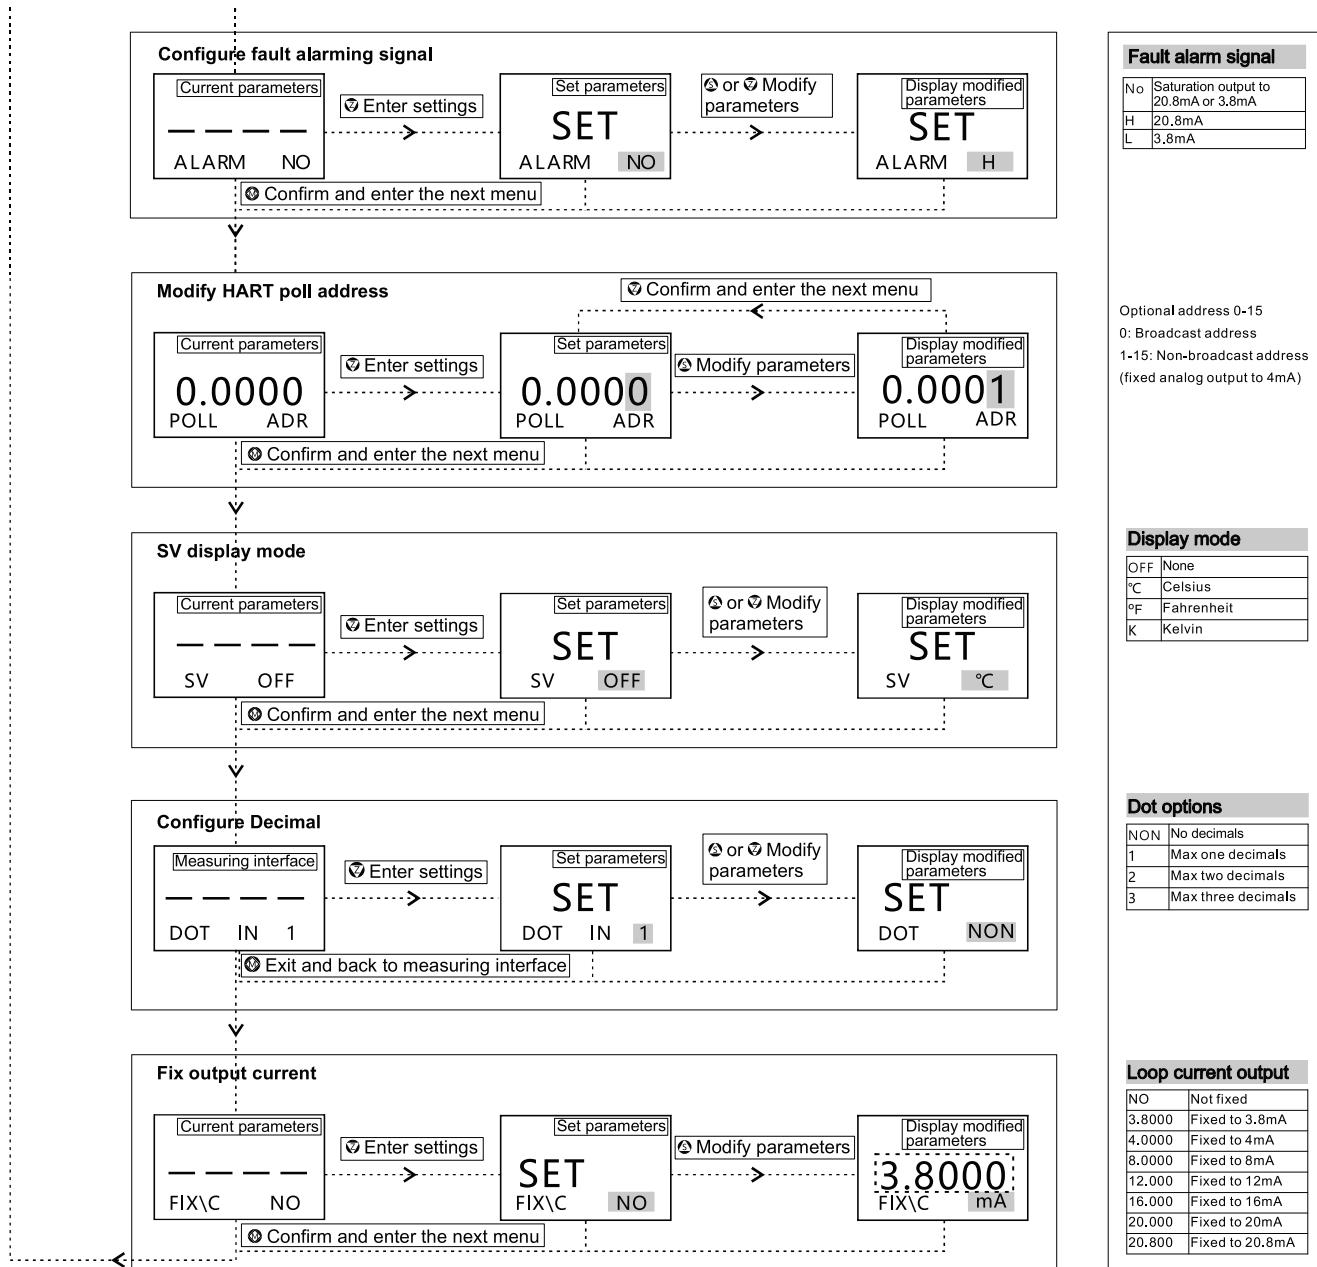


# Quick Start Guide

## >11. Modbus Programming Menu

### Keys operation

#### Set PV=0

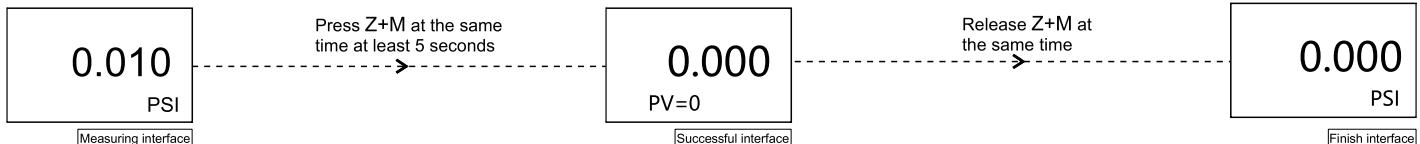


#### Full range adjustment




#### Factory reset


##### Method 1:

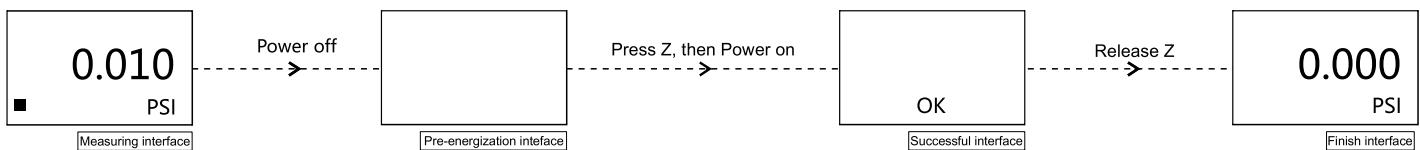


##### Method 2:

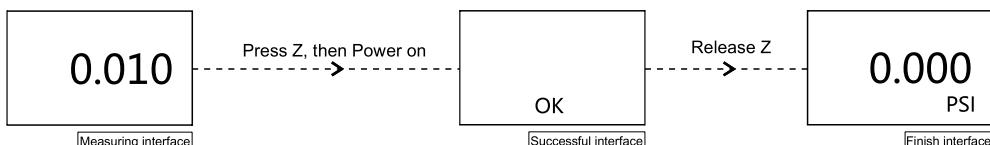


#### Temperature sensor unit switching:

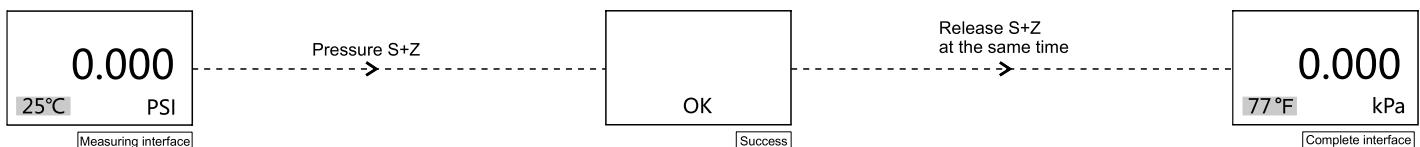


### Detailed operating instructions

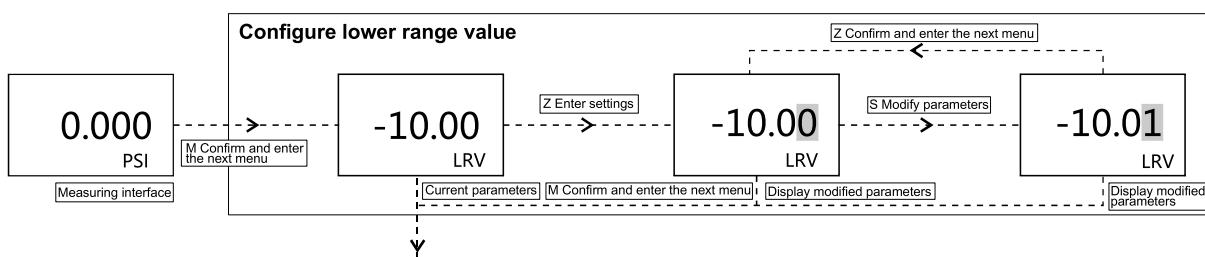

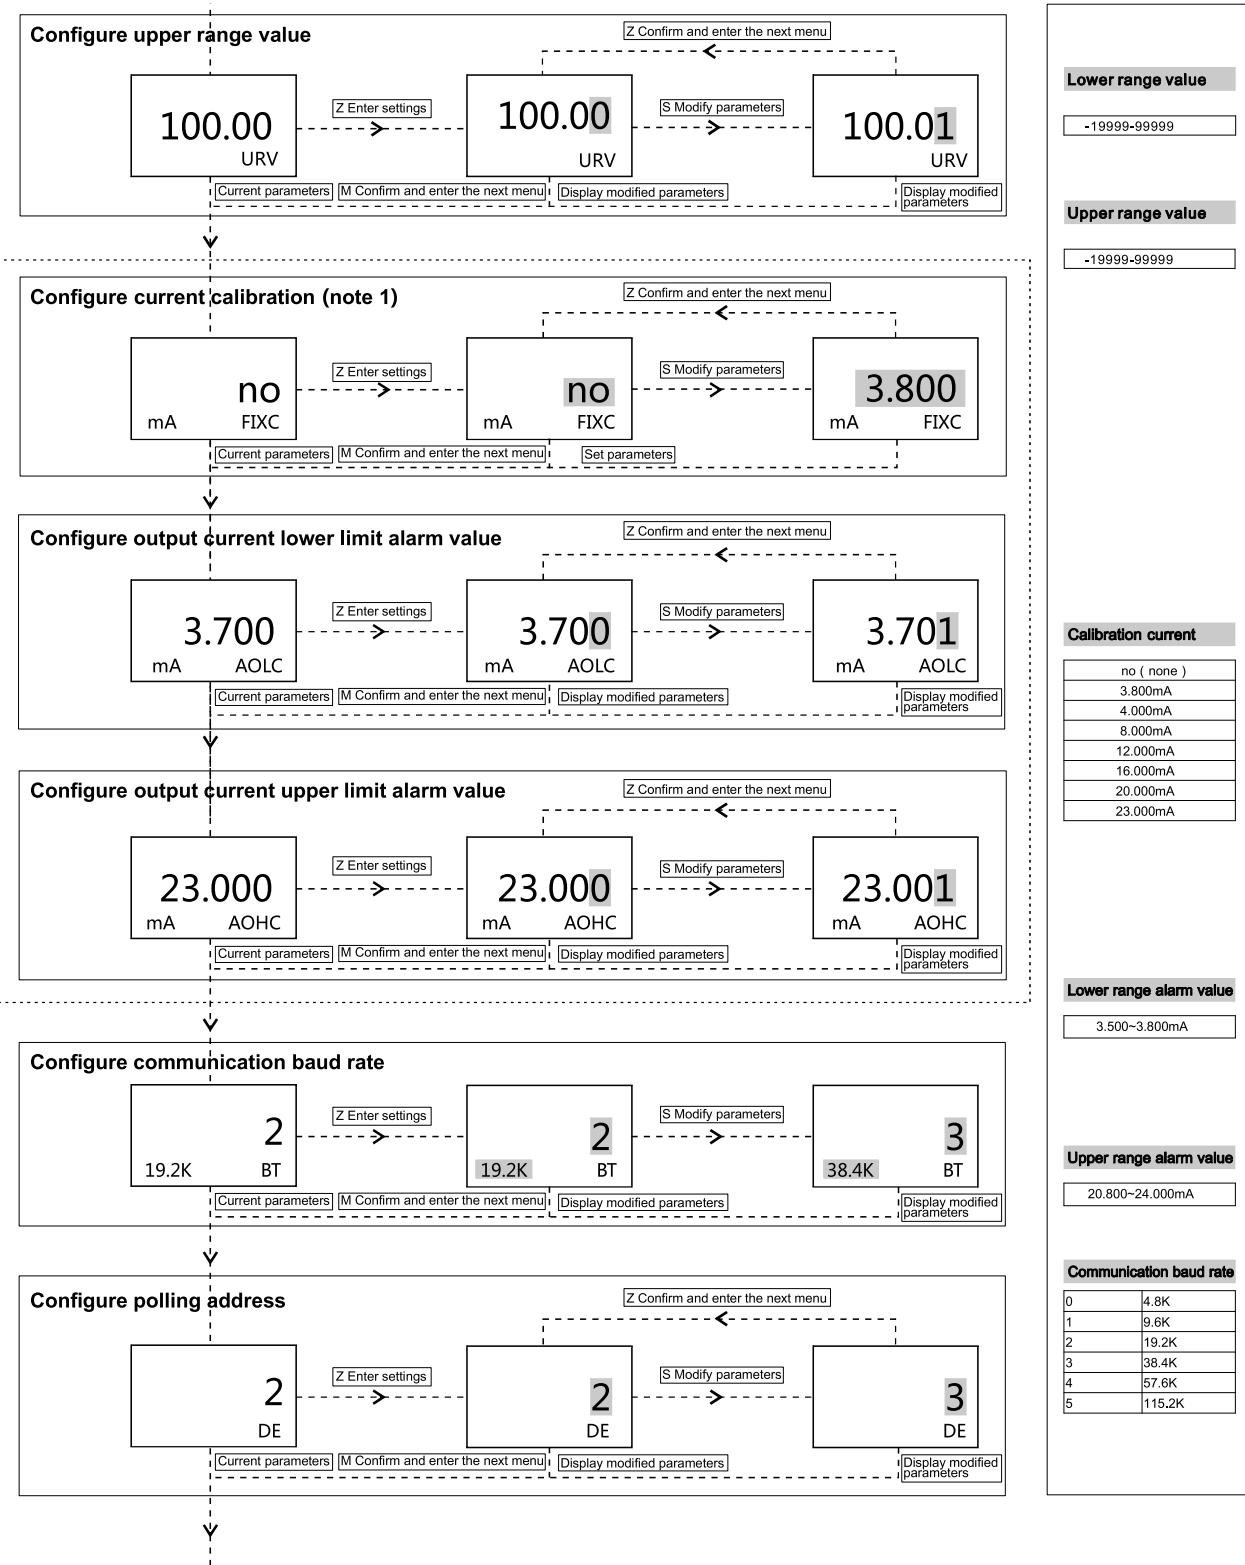

# Quick Start Guide


## 12. Menu Tree

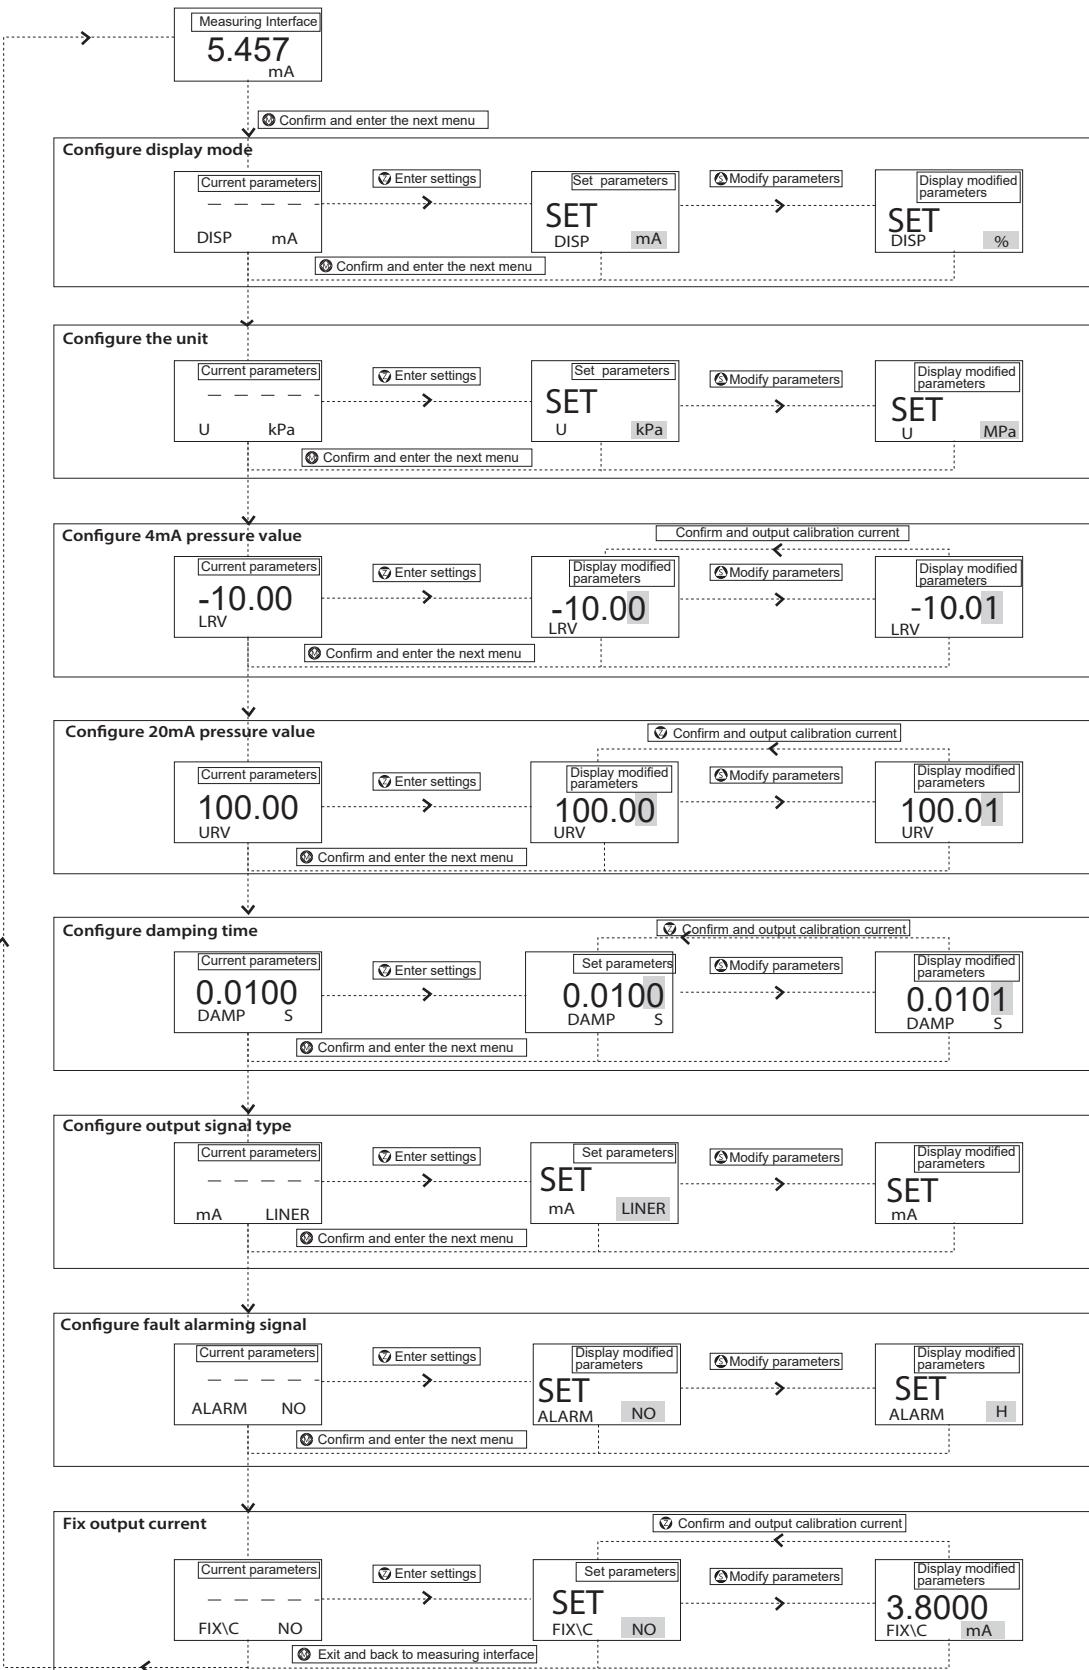

### Parameters table

Display mode	
%	Percentage
PV	Process variable
mA	Current
Units	
( $\downarrow$ , $\uparrow$ )	
kPa	
MPa	
bar	
psi	
mmHg	
mmH <sub>2</sub> O	
mH <sub>2</sub> O	
inH <sub>2</sub> O	
inHg	
mHg	
TORR	
mbar	
g/cm <sup>2</sup>	
kg/cm <sup>2</sup>	
Pa	
ATM	
mm	
m	
Lower range value	
-19999-99999	
Upper range value	
-19999-99999	
Damping time	
0 to 100s	
Output signal type	
$\sqrt{-}$	Square root
LINER	Linearity
Fault alarm signal	
NO	None
H	20.8 mA
L	3.8 mA
Output current	
NO (none)	
3.8000 mA	
4.0000 mA	
8.0000 mA	
12.000 mA	
16.000 mA	
20.000 mA	
20.800 mA	



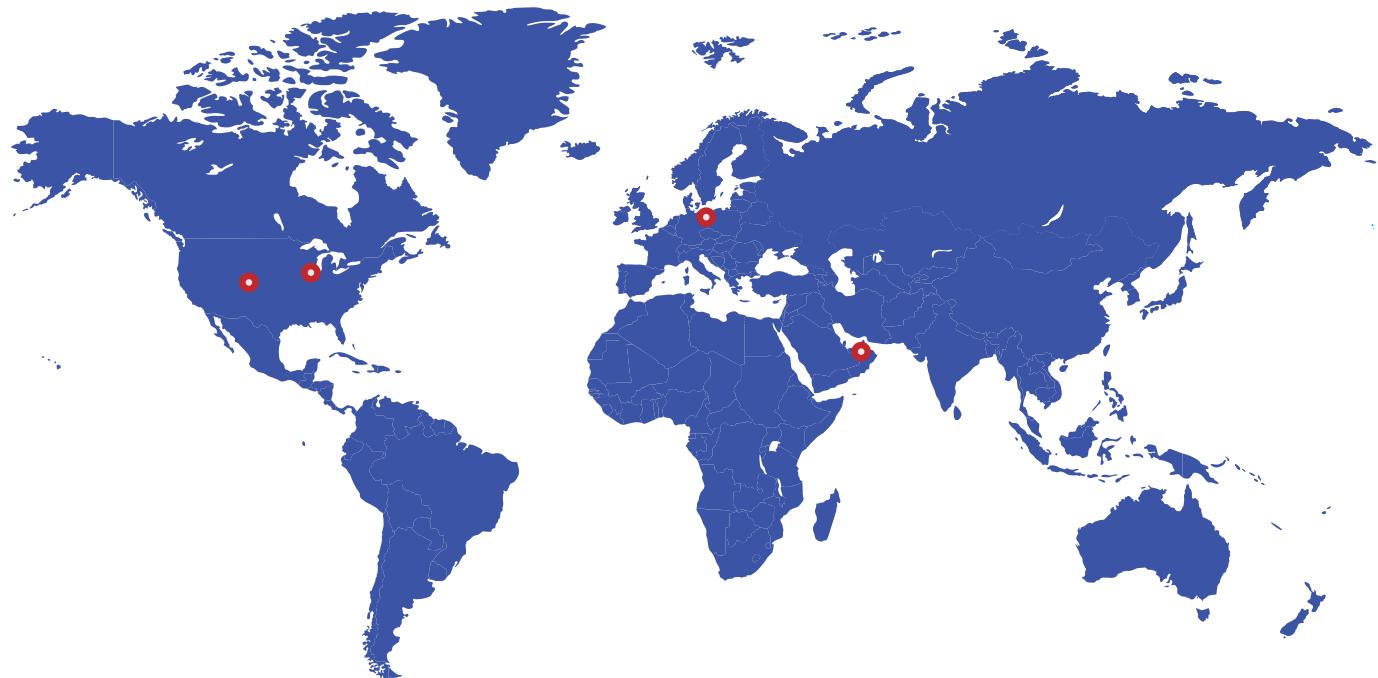

### Tek-Trol LLC

796 Tek Drive Crystal Lake, IL  
60014, USA  
Sales: +1 847-857-6076

### Tek-Dpro Flow Solutions

PO Box 121 Windsor, Colorado  
80550, USA  
Sales: +1 847-857-6076

### Tek-Trol Solutions BV

Florijnstraat 18, 4879 AH  
Etten-Leur, Netherlands  
Sales: +31 76-2031908

### Tek-Trol Middle East FZE

SAIF Zone, Y1-067, PO BOX No.  
21125, Sharjah, UAE  
Sales: +971-6526-8344

---

Support: +1 847-857-6076

Email: [tektrol@tek-trol.com](mailto:tektrol@tek-trol.com)

[www.tek-trol.com](http://www.tek-trol.com)